



GETTING TO KNOW YOUR  
**2022**  
**SILVERADO 4500 HD /**  
**5500 HD / 6500 HD**



[chevrolet.com](http://chevrolet.com)

Review this Quick Reference Guide for an overview of some important features in your Chevrolet Silverado 4500 HD/5500 HD/6500 HD. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [chevrolet.com](http://chevrolet.com). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



# INSTRUMENT PANEL

Exterior Lamps  
Control/Instrument  
Panel Illumination  
Control

Integrated  
Trailer Brake  
Control

4WD  
Control†

Turn Signal/  
Windshield  
Wipers Lever

Driver  
Information  
Center

Range  
Selection  
Buttons

Tow/Haul  
Mode  
Control



Power Mirror  
Control†/Door  
Lock Switch/  
Window Buttons

Cruise  
Control  
Buttons

Audio Next/Previous  
Favorite Station  
Controls†  
(behind steering  
wheel)

Tilt  
Steering  
Wheel  
Lever (on  
steering  
column)

Audio Volume  
Control†  
(behind steering  
wheel)

Driver Information  
Center Controls/  
Voice Recognition  
Buttons†

## SYMBOLS



Low Fuel



Security



Airbag Readiness



BRAKE Brake System



Tow/Haul Mode



Power Take-Off



Cruise Control Set



Diesel Exhaust Brake



Check Engine

Driver's  
Heated Seat  
Buttons\*

Infotainment  
System (8-inch\*  
screen shown\*)

Climate  
Controls

Passenger's  
Heated Seat  
Buttons\*

USB Port  
(in glove box; LT bench  
seat models only)






USB  
Ports\*



 
Accessory  
Power  
Outlets\*

110-Volt  
Power  
Outlet\*

Traction Control/Cargo Lamp/  
Diesel Exhaust Brake/Power  
Take-Off\*/Air Suspension\*/  
Auxiliary\* Buttons

LT model shown

-  Traction Control Off
-  Lights On Reminder
-  Antilock Brake System

-  Charging System
-  Seat Belt Reminder
-  Wait-to-Start

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.


## KEYED IGNITION SYSTEM
 
### STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the On/Run position.
- ▶ Observe the Wait-to-Start light. If the light is not on, rotate the key clockwise to the Start position.

### TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

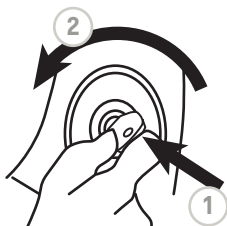

See *Driving and Operating* in your Owner's Manual.

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)♦

### Lock

Press to lock all doors.

### Unlock

Press to unlock the driver's door.  
Press again to unlock all doors.



### Vehicle Locator/Panic Alarm


Press and release to locate your vehicle.  
Press and hold to activate the alarm. Press again to cancel the alarm.

**Note:** To change the remote lock, unlock, and remote start settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment system.*



### Remote Vehicle Start♦



Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

**Note:** If the *Remote Start Auto Heat Seats♦* option is selected in the *Vehicle Settings*, the heated seat button indicators do not illuminate and the temperature performance of the unoccupied seat may be reduced during the remote start. The heated seats turn off when the ignition is turned on.

See *Keys, Doors and Windows* in your Owner's Manual.

## DOOR LOCKS

- ▶ To unlock or lock all doors, press the power door  Unlock/ Lock button, located on the front doors.

**Note:** To change the power lock and unlock settings, go to *Settings > Vehicle > Power Door Locks* on the infotainment system.

- ▶ To open a locked door from inside, pull the inside door handle to unlock the door and then pull the door handle again to open the door.

See *Keys, Doors and Windows* in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

## POWER FRONT SEATS

### SEAT ADJUSTMENTS

#### A. Seat Cushion Adjustment

 
Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

#### B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Adjustment

Move the rear control to adjust the lumbar support.

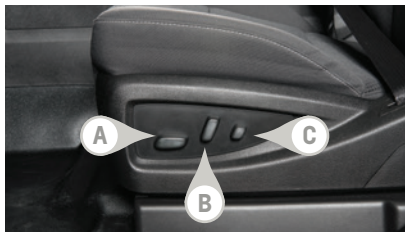

See Seats and Restraints in your Owner's Manual.

## HEAD RESTRAINTS

- ▶ To raise the head restraint, pull the head restraint up.
- ▶ To lower the head restraint, press the button on top of the seatback and push the head restraint down.

See Seats and Restraints in your Owner's Manual.



## STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle in Park, pull the lever on the left side of the steering column and adjust the steering wheel up or down. Release the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



## POWER MIRRORS

- ▶ Press the  Power Mirror Selector switch (A) to select the driver's or passenger's outside mirror; use the  Four-Way Control (B) to adjust the mirrors.

See Keys, Doors and Windows in your Owner's Manual.





## DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

### 3.5-INCH\* DRIVER INFORMATION CENTER

#### Menu Items

- ▶ Turn the reset stem on the instrument cluster to scroll through the following menu items: Digital Speedometer, Trip Odometer, Fuel Range, Average Fuel Economy, Tire Pressure, Remaining Oil Life, Transmission Fluid Temperature, Trailer Brake, Hour Meter, and Units.



#### Set/Reset an Item

- ▶ Press the reset stem to set a menu item or clear a message. Press and hold the stem to reset a menu item.

### 4.2-INCH\* COLOR DRIVER INFORMATION CENTER\*

#### Menu Items

Use the control pad on the right side of the steering wheel to view the Info (including trip odometers and fuel information), Audio, Phone, Navigation, and Options menus.



#### Controls

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press the ✓ button to open a menu, or to select or reset an item.

#### Info Pages

Different Info Pages can be selected to be displayed in the Info menu.

1. Use the controls to highlight Options and then press the ✓ button.
2. Scroll to Info Pages. Press the ▶ button to enter the menu.
3. Scroll through the list of items.
4. Press the ✓ button to select or deselect an item to display in the Info menu.



See Instruments and Controls in your Owner's Manual.

## LIGHTING

### EXTERIOR LAMP CONTROLS

Rotate the knob (A) to activate the exterior lamps.

 **Off/On**

#### AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps** †

Press to turn the fog lamps on or off.

### INSTRUMENT PANEL LIGHTING

 **Instrument Panel Brightness**

Rotate the thumbwheel (B) to adjust the instrument panel lighting.

### CARGO LAMP

 **Cargo Lamp**

With the vehicle in Park, press the button (C) to turn the cargo lamp and outside mirror lights † on or off. The button indicator illuminates when the lamp is on.



See Lighting in your Owner's Manual.

## WINDSHIELD WIPERS

Rotate the band on the lever to activate the wipers.

 **Fast Wipes**

 **Slow Wipes**

 **Intermittent Wipes**

Rotate the band up for more frequent wipes or down for less frequent wipes.

**OFF**

 **Single Wipe**

 
 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.




See Instruments and Controls in your Owner's Manual.

# CLIMATE CONTROLS

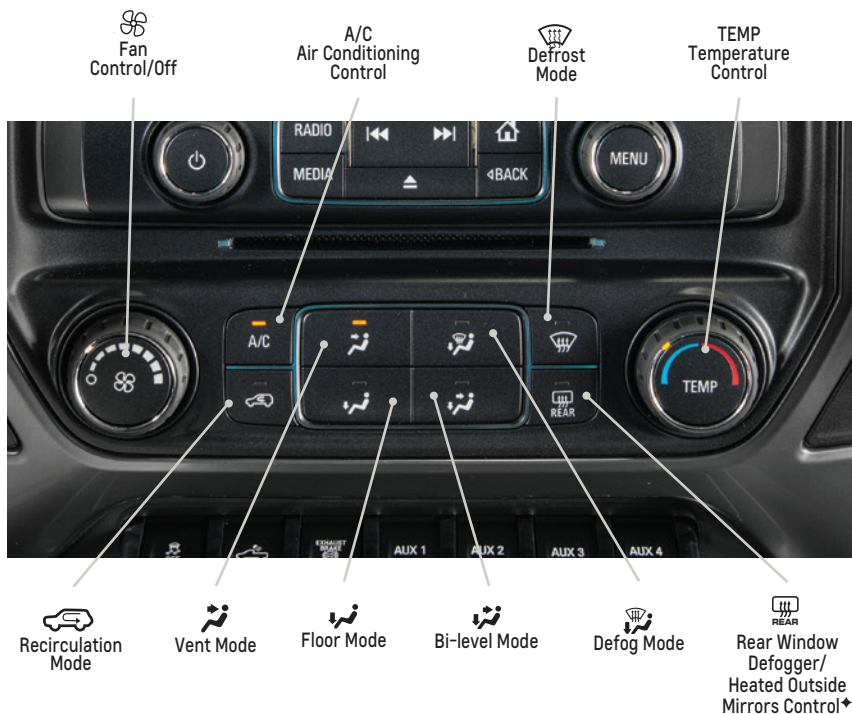

## RECIRCULATION MODE

- ▶ Press  **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

**Note:** When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

## AIR VENTS

- ▶ Use the sliding knobs on the center and side air vents to direct the airflow.
- ▶ Use the thumbwheels below the air vents to open or close off the airflow.

See Climate Controls in your Owner's Manual.



## INFOTAINMENT SYSTEM WITH 4.2-INCH\* SCREEN

Read your Owner's Manual for important information about using the infotainment system while driving.



Favorites:  
Press to  
select a  
favorite  
station



RADIO  
Select  
AM, FM,  
SiriusXM<sup>◆</sup>

MEDIA  
Select  
USB,  
Bluetooth,  
AUX, CD<sup>◆</sup>

SEEK  
Previous/Next  
radio station or  
track

TONE/  
Tone menu/  
Eject CD<sup>◆</sup>

<BACK  
Go back to  
previous  
menu

Home  
page

MENU  
Tune radio  
stations/  
Open and  
select  
menus

For assistance with the infotainment system, call 1-855-4-SUPPORT (1-855-478-7767) or visit [chevrolet.com/support](http://chevrolet.com/support).

### SETTING THE TIME

1. Select Settings on the Home page.
2. Select Time and Date.
3. Select Set Time.
4. Use the **MENU** knob to adjust the hours, minutes, and AM or PM.
5. Press **<BACK** to exit the menu.

### STORING FAVORITES

Up to 25 radio stations from all bands (AM, FM or SiriusXM<sup>◆</sup>) can be stored, in any order, on up to five pages.

1. Tune in the desired radio station.
2. Press the **<** or **>** button to display the desired page.
3. Press and hold one of the Favorite buttons until a beep is heard.
4. Repeat the steps for each desired station.

See *Infotainment System* in your Owner's Manual.

## INFOTAINMENT SYSTEM WITH 7-INCH\* COLOR SCREEN

Read your Owner's Manual for important information about using the infotainment system while driving.



Applications:  
Touch a screen  
icon to access an  
application



Home  
page



SEEK  
Previous radio  
station or  
track



Power/  
Volume



SEEK  
Next radio  
station or track



Press to view Phone screen  
or answer a call/Press  
and hold to access  
Press to Talk

For assistance with the infotainment system, call 1-855-4-SUPPORT (1-855-478-7767) or visit [chevrolet.com/support](http://chevrolet.com/support).

### STORING FAVORITES

Up to 25 AM, FM and SiriusXM<sup>†</sup> radio stations can be stored, in any order, on up to five pages.

1. Tune in the desired radio station.
2. Touch the < or > button to display the desired page.
3. Touch and hold one of the preset screen buttons until a beep is heard.
4. Repeat the steps for each desired station.

See Infotainment System in your Owner's Manual.


## INFOTAINMENT SYSTEM FEATURES<sup>◆</sup>

### SETTING THE TIME

1. Touch Settings on the Home page.
2. Touch Time and Date.
3. Touch Set Time.
4. Touch the arrows to adjust the hours, minutes, and AM or PM.
5. Touch ◀ Back to exit the menu.

### NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech.

Example phone command (using your paired phone): “Call Dave” or “Call 555-1212.”

Example radio control command: “Tune to 99.5 FM.”

Example media music device search command (when connected to USB only):  
“Play artist [name]” or “Play song [name].”

Help: Say “Help” for assistance.

### PORTABLE AUDIO DEVICES AND POWER OUTLETS

On vehicles with bench seats, an accessory power outlet and 110-volt power outlet<sup>◆</sup> are located on the lower-center of the instrument panel. USB ports and an accessory power outlet also are located in the center seat storage compartment.

On vehicles with bucket seats, USB ports, accessory power outlets, and a 110-volt power outlet<sup>◆</sup> are located on the center console. USB ports and an accessory power outlet also are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to the USB port.
- ▶ Press the **MEDIA** button, or select Audio<sup>◆</sup> and then Source, to select a portable device as the audio source.



See Infotainment System in your Owner's Manual.

## INFOTAINMENT SYSTEM FEATURES<sup>◆</sup>

### APPLE CARPLAY<sup>®◆</sup>

Apple CarPlay capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system. No app is required.

1. Connect your compatible phone by plugging the Lightning cable into a USB data port. Use the Lightning cable provided with your phone. Aftermarket cables may not work.
2. The Projection icon will change to Apple CarPlay. Touch the Apple CarPlay icon to have your apps displayed.

### ANDROID AUTO<sup>™◆</sup>

Android Auto capability is available through a compatible smartphone using the Projection icon on the Home page of the infotainment system.

1. Download the Android Auto app to your phone from the Google Play Store.
2. Connect your compatible phone by plugging the phone USB cable into a USB data port. Use the USB cable provided with your phone. Aftermarket cables may not work.
3. The Projection icon will change to Android Auto. Touch the Android Auto icon to have your apps displayed.


*See Infotainment System in your Owner's Manual.*

## BLUETOOTH<sup>®</sup> SYSTEM<sup>◆</sup>

*Read your Owner's Manual for important information about using the Bluetooth system while driving.*

To use a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [chevrolet.com/support](http://chevrolet.com/support) for more information.

### PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone." To use the infotainment screen, select the Phone icon > Phones > Pair Device or Search Device.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Depending on the phone, your phone book may be downloaded automatically.

### STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, press the **MEDIA** button, or select Audio<sup>◆</sup> and then Source, to select Bluetooth as the source to stream audio.

*See Infotainment System in your Owner's Manual.*

## AUDIO STEERING WHEEL CONTROLS

### Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth Speech Recognition (Siri® or Voice Command) on a paired mobile phone.

### End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

### Volume

(behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

### Next/Previous Favorite Station

(behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track.



Next/Previous Favorite Station buttons shown.

See Instruments and Controls in your Owner's Manual.

## WIRELESS PHONE CHARGING

The wireless charging system for mobile devices is located on the storage tray on top of the center console (Crew Cab bucket seat-equipped models only). To check mobile device compatibility, visit [chevrolet.com/support](http://chevrolet.com/support). See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, screen up, against the rear alignment rib on the charging pad.
4. The charging symbol will appear on the infotainment screen when charging. If not charging, remove the device for 3 seconds and rotate it 180 degrees before placing it on the charging pad again.



See Instruments and Controls in your Owner's Manual.



## 4G LTE WI-FI® HOTSPOT




With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- ▶ To retrieve the name and password for the hotspot, go to Settings > Wi-Fi > Manage Wi-Fi Networks.

*See Instruments and Controls in your Owner's Manual.*

## CRUISE CONTROL

### SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.



### ADJUSTING CRUISE CONTROL


#### RES+ Resume/Accelerate

Press to resume a set speed. When active, press once to increase speed 1 mph; press and hold to continue increasing speed.

#### SET- Set/Coast

When active, press once to decrease speed 1 mph; press and hold to continue decreasing speed.

#### Cancel

Press the  button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

*See Driving and Operating in your Owner's Manual.*

## REAR VISION CAMERA

When the vehicle is in Reverse, an image of the area behind the vehicle displays on the infotainment screen. The previous screen returns when the vehicle is shifted out of Reverse.

- ▶ To return to the infotainment screen while the vehicle is in Reverse, press any infotainment button or reach a vehicle speed of approximately 8 mph.

*See Driving and Operating in your Owner's Manual.*

## VEHICLE CUSTOMIZATION

Some vehicle features can be customized using the Settings menus on the infotainment system. The Settings menus may include Time and Date, Language, Radio, Vehicle, Bluetooth, Apple CarPlay<sup>◆</sup>, Android Auto<sup>◆</sup>, Voice, Display, Return to Factory Settings, Software Information, Wi-Fi<sup>◆</sup>, and more.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting. Settings are saved automatically.
4. Select ◀Back to exit each menu.



See *Instruments and Controls* in your Owner's Manual.

## AUTOMATIC TRANSMISSION

### RANGE SELECTION MODE

Range Selection Mode allows the driver to select the range of gears desired for the current driving conditions.


1. Move the shift lever to the L (Manual) position.
2. Press the + (plus) or - (minus) button (A) on the shift lever to select a lower or higher gear. The current gear is displayed next to the L on the Driver Information Center.



The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.

### TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button (B) on the end of the shift lever to turn the system on or off.

See *Driving and Operating* in your Owner's Manual.

### NEUTRAL-AT-STOP

The automatic transmission shifts to neutral when the brake pedal is depressed while the vehicle is at a complete stop. It remains in neutral until the brake pedal is released.

See your *Allison Transmission Operator's Manual*.

## FOUR-WHEEL DRIVE

### MANUAL LOCKING HUBS

The front axle must be locked before shifting the transfer case.

- ▶ When traction conditions vary, turn the front hub to the Lock position on each front wheel.
- ▶ When four-wheel drive is not needed, turn each front hub to the Free position.



### ELECTRONIC TRANSFER CASE

Use the electronic four-wheel-drive transfer case knob on the left side of the instrument panel to shift into and out of four-wheel drive. The indicator light on the knob flashes while the transfer case shifts and remains on when the shift is complete. If the shift cannot be completed, the transfer case goes back to the last setting.

**2↑ Two-Wheel Drive High** – Use for most streets and highways. Shift into this mode at 10 mph or less, except when shifting from **4↓**.

**4↑ Four-Wheel Drive High** – Use when extra traction is needed or in most off-road driving. Shift into this mode at 10 mph or less, except when shifting from **4↓**.

**4↓ Four-Wheel Drive Low** – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped with the transmission in Neutral. Wait for the indicator light to stop flashing before shifting the transmission into gear.

**N Neutral** – Use when towing the vehicle.



*See Driving and Operating in your Owner's Manual.*

## TRACTION CONTROL/STABILITRAK

The traction control system limits wheel-spin in difficult driving conditions. The StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions and features Proactive Roll Avoidance, Trailer Sway Control and Hill Start Assist.

**Turn off traction control if the vehicle is stuck and rocking the vehicle is required.**

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center of the instrument panel to turn traction control off or on again.



*See Driving and Operating in your Owner's Manual.*

## INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.


- ▶ Squeeze the levers together on the control panel (left lever does not move) to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.



See *Driving and Operating* in your Owner's Manual.

## DIESEL EXHAUST BRAKE

The engine exhaust brake enhances the vehicle brake system by using engine braking and automatically downshifting the transmission, depending on the length of time the brakes are applied, to help slow the vehicle.

- ▶ Press the  **Diesel Exhaust Brake** button on the center of the instrument panel to turn the system on or off.


The button indicator will turn on when the exhaust brake is activated.



See *Driving and Operating* in your Owner's Manual.

## AIR SUSPENSION<sup>†</sup>

The rear air suspension can be temporarily lowered by approximately 6 inches to make it easier to load the vehicle.

- ▶ With the vehicle in Park and the ignition in the On/Run position, press the  **Air Suspension Dump (ASD)** button on the center of the instrument panel to release the air supplied to the rear suspension, lowering the rear air suspension for loading. The button indicator will illuminate.
- ▶ When the vehicle is shifted out of Park, air is filled into the rear air suspension for the proper ride height. The button indicator will turn off.

See *Driving and Operating* in your Owner's Manual.

## DIESEL ENGINE FEATURES

### DIESEL EXHAUST FLUID (DEF)

DEF reduces the amount of regulated emissions produced by the diesel engine. The DEF level must be maintained for the vehicle to run properly. As the DEF level becomes low, warnings are displayed on the Driver Information Center. These warnings will increase in intensity as the DEF level is reduced. As the tank nears empty, vehicle speed will be limited in a series of steps. At least 2 gallons of DEF must be added to release the speed limitation.

The DEF fill port (blue cap) is located on the rear of the passenger-side fender, behind the front wheel.

### DIESEL PARTICULATE FILTER (DPF)

The DPF filters the diesel exhaust gas to reduce emissions. Occasionally, the DPF needs to be cleaned. When needed, the DPF will clean itself as part of normal operation as the vehicle is driven. If driving conditions do not allow the cleaning to take place, a Driver Information Center message will be displayed.

 


*See Driving and Operating in your Owner's Manual.*

## REFUELING THE VEHICLE

The fuel fill port is located on the driver's side of the vehicle. If equipped with dual fuel tanks<sup>♦</sup>, each tank must be filled through its own fill port.

1. Remove the fuel cap by turning it counter-clockwise.
2. Fully insert the fuel pump nozzle before starting to fill the tank.
3. Replace the fuel cap and turn it clockwise until it clicks.

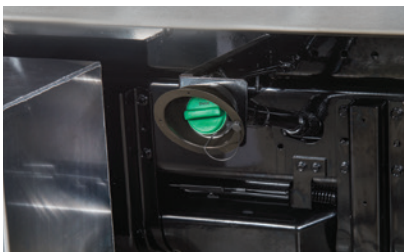

*See Driving and Operating in your Owner's Manual.*



## OIL LIFE MONITOR

The Oil Life Monitor calculates engine oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the engine oil and filter. The Oil Life Monitor should be reset to 100% only following an oil change.

See *Vehicle Care in your Owner's Manual*.



## BATTERY LOCATION

The batteries are located under the cab on the driver's side of the vehicle.

An auxiliary jump-start positive terminal<sup>†</sup> is located on the driver's side of the vehicle beneath the driver's door.

 
 
See *Vehicle Care in your Owner's Manual*.



## TILT-HOOD OPENING

1. Undo the two hood latches (A) on each side of the hood.
  2. Brace your knees against the front bumper and pull the grips (B) at the front of the hood (above the grille).
  3. The hood and fenders will tilt forward. The hood actuator strut lock (C), located near the bumper on the passenger's side, will lock to secure the hood.
- ▶ Before closing the hood, pull up on the hood actuator strut lock to unlock the actuator strut and allow the hood to close.

See *Vehicle Care in your Owner's Manual*.

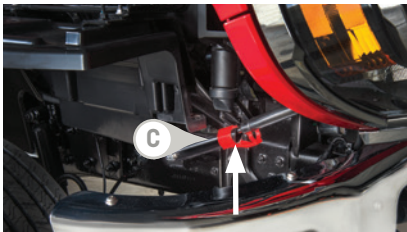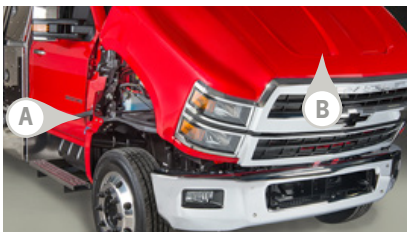

## ROADSIDE ASSISTANCE

1-888-899-1327

TTY Users: 1-888-889-2438

As the owner of a new medium-duty Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/100,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

### ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, push the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, push the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, set your parking location and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from the App Store or Google Play Store.*

## CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service required) and more. Create an account today at **chevrolet.com/owners**.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2021 General Motors LLC. All Rights Reserved.



84956791

**We recommend always using  
ACDelco or GM Genuine Parts.**



84956791 A