



GETTING TO KNOW YOUR  
**2022 SIERRA 1500  
LIMITED**

**GMC**

[gmc.com](http://gmc.com)

Review this quick reference guide for an overview of some important features in your GMC Sierra 1500 Limited. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [gmc.com/owners](http://gmc.com/owners). For easy reference, keep this guide with your Owner's Manual in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.  
Please read your Owner's Manual for complete instructions.



# INSTRUMENT PANEL

Exterior/  
Instrument  
Panel/Cargo  
Lamp Controls

4WD  
Controls♦/  
Traction Select  
Controls

HUD Controls♦  
(behind  
steering wheel)

Cruise Control/ Forward  
Collision Alert♦/Heated  
Steering Wheel♦

Turn Signal/  
Windshield  
Wipers Lever

Driver  
Information  
Center

Range +/-  
Gear Selection  
Buttons  
(on shift lever)



Power  
Mirror♦/  
Window  
Buttons

Electric  
Parking  
Brake  
Switch

Audio Next/  
Previous Favorite  
Station Controls  
(on back of  
steering wheel)

Steering  
Wheel  
Adjustment  
Lever  
(on steering  
column)

Audio Volume  
Control  
(on back  
of steering  
wheel)

Driver  
Information  
Center  
Controls♦/Voice  
Recognition  
Buttons

Engine  
Start/Stop  
Button♦

Gasoline model shown

## Symbols

	Low Fuel		StabiliTrak Off		Lights On Reminder
	Traction Control Off		Forward Collision Alert		Airbag Readiness
	BRAKE Brake System		Security		Engine Oil Pressure
	Cruise Control		PARK Electric Parking Brake		Check Engine
	StabiliTrak Active		Electric Parking Brake Service		Lane Keep Assist

Driver's Heated/  
Ventilated Seat  
Buttons◆

Infotainment  
System (8-inch\*  
screen shown◆)

Infotainment  
System  
Controls

Climate  
Controls◆

Passenger's Heated/  
Ventilated Seat  
Buttons◆



Lane Keep Assist◆/  
Park Assist◆/Auto Engine  
Stop-Start Disable◆/  
Power Release Tailgate◆/  
Hazard Warning Flashers  
Buttons

Wireless  
Phone  
Charging  
Pad◆

Integrated  
Trailer Brake  
Control◆

USB Ports/  
Accessory Power  
Outlet/120-Volt  
Power Outlet◆

Traction Control-StabiliTrak  
Off/Power Outlet◆/Hill  
Descent Control◆/Power  
Windows◆/MultiPro Power  
Assist Steps◆ Buttons

Uplevel model shown

- Vehicle Ahead
- Antilock Brake System
- Low Tire Pressure
- Door Ajar
- Charging System

- Driver Seat Belt Reminder
- Passenger Seat Belt Reminder
- 4WD Modes

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)◆


### Lock

Press to lock all doors and tailgate.

### Unlock

Press to unlock the driver's door or all doors and tailgate.

### Remote Windows◆

Press and hold the  Lock button until the windows are fully open. To enable, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

### Remote Mirrors◆

Press and hold the Lock/Unlock button for 1 second to fold/unfold the power mirrors. To enable, go to Settings > Vehicle > Comfort and Convenience on the infotainment screen.



### Vehicle Locator/Panic Alarm



Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times

 
Press and hold to activate the alarm. Press again to cancel the alarm.

### Power Release Tailgate◆

Press twice to lower the tailgate.

### Remote Vehicle Start◆

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

To cancel a remote start, press and hold the  button until the parking lamps turn off.

See Keys, Doors and Windows in your Owner's Manual.

## KEYLESS ACCESS SYSTEM◆

The Keyless Access System enables operation of the doors and tailgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or purse. The key fob must be within 3 feet of the tailgate or the door being unlocked/locked.

### KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and tailgate.
- ▶ Press the button on a passenger door handle to unlock all doors and tailgate.
- ▶ Press the lower button on the tailgate to lower the standard tailgate.



### KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and tailgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

**Note:** To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

 
## KEYED IGNITION SYSTEM (IF EQUIPPED)

### STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the Start position.

### TURNING OFF THE VEHICLE

- ▶ Shift to Park.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

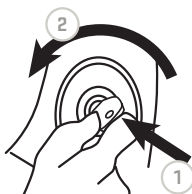

See Driving and Operating in your Owner's Manual.

## KEYLESS (PUSH-BUTTON) START♦

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

### STARTING THE ENGINE/ON

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

**Note:** If the key fob battery is weak, place the key fob in the pocket in the center storage compartment (under the bench seat) or center console cupholders (bucket seats) to enable the engine to start. Replace the key fob battery as soon as possible.



### STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine. The green button indicator will turn off.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

### ACCESSORY MODE


- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The amber button indicator will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.

## AUTO ENGINE STOP/START OPERATION<sup>◆</sup> (IF EQUIPPED)

The fuel-saving Engine Stop/Start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the tachometer will read AUTO STOP. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart. After parking the vehicle and turning off the engine, the tachometer will read OFF.

The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions.

- ▶ Press the  **Auto Stop** button on the center of the instrument panel when the engine is running to disable the system. The button indicator will turn off.


The Engine Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.


## POWER FRONT SEATS<sup>◆</sup>

### SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat and power outside mirrors<sup>◆</sup> to the desired positions.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2 (key fob 1 or 2).

To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button 1 or 2.

### RECALL MEMORY POSITIONS

- ▶ Press and hold button **1** or **2** or  **Exit** until the set position is reached.
- ▶ To enable the memory positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.



See Seats and Restraints in your Owner's Manual.

## UNIVERSAL REMOTE SYSTEM<sup>◆</sup>

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to [homelink.com](http://homelink.com) for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.



## DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

### BASE DIC CONTROL

- ▶ Use the trip odometer reset stem on the instrument cluster to access the DIC menu. Turn the stem to scroll through the menu. Press and hold the stem to reset an item.

### MIDLEVEL AND UPLEVEL DIC CONTROLS♦

Use the controls on the right side of the steering wheel to view the various menus.

 
- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Rotate the thumbwheel up or down to move through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

### SELECT INFO PAGES♦

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Scroll through the list of items.
4. Press the thumbwheel to select or deselect an item to display in the Info menu.



Midlevel and uplevel DIC Controls♦ shown

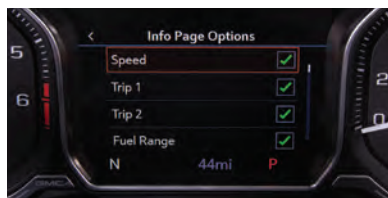

See Instruments and Controls in your Owner's Manual.

## MULTICOLOR HEAD-UP DISPLAY♦

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information, such as audio changes and navigation directions, also may be displayed. The HUD controls are located on the left side of the instrument panel.

### HUD Position

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

 
### INFO

Press to select from four displays:

- Speed View – Speedometer only
- Active Safety View – Speedometer and driver assistance information
- Navigation View – Speedometer and turn-by-turn navigation information
- Off-Road View – Speedometer and off-road information (e.g. pitch angle, steering angle and rolling angle)

### ± Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.

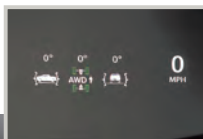

See Instruments and Controls in your Owner's Manual.

## CLIMATE CONTROLS/VEHICLE CONTROLS

Uplevel model with dual automatic climate controls shown



See Introduction in your Owner's Manual.

## VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press **BACK** to exit each menu.



Uplevel model shown

See Instruments and Controls in your Owner's Manual.



## INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

Applications Tray:  
Shortcuts to  
commonly  
used apps

Applications♦:  
Touch a screen icon  
to access an app

Additional Pages:  
Swipe to display overview  
page or additional pages  
of apps (if available)



Power/  
Volume/Mute

Home  
page

SEEK  
Previous/Next  
radio station or  
track


BACK  
Move back one  
level in the  
menus

Turn to tune stations  
and highlight menu  
items/Press to open  
and select items

Uplevel infotainment system♦ shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. For assistance, call 1-855-4-SUPPORT (1-855-478-7767) or visit [gmc.com/support](http://gmc.com/support).

### MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

See Infotainment System in your Owner's Manual.

# INFOTAINMENT SYSTEM

## STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM<sup>®</sup>) can be stored in any order. The source options are on the left side of the audio page.

1. Display the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

Favorites also can be stored by touching

★ in a station list.



Uplevel model shown

## SIRIUSXM WITH 360L<sup>+</sup>


The personalized content of SiriusXM with 360L offers over 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See [siriusxm.com](http://siriusxm.com) and [onstar.com](http://onstar.com) for details.

## IN-VEHICLE APPS

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-In, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity, and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to [onstar.com](http://onstar.com) for data plan information.

## APPLE CARPLAY<sup>®</sup> AND ANDROID AUTO<sup>™</sup><sup>+</sup>

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
  2. There are two ways to set up device projection:
    - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
    - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
  3. Follow the instructions on the infotainment system and the phone.
  4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- ▶ To exit Apple CarPlay or Android Auto, press the  Home button. To return to Apple CarPlay or Android Auto, press and hold the Home button.


See Infotainment System in your Owner's Manual.

## BLUETOOTH® SYSTEM ♦

Read your Owner's Manual for important information about using the Bluetooth system while driving.


Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

### PAIR A PHONE

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone." To use the infotainment screen, select the Phone icon > Phones or Connect Phone > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

### SECONDARY PHONE

A secondary phone can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect. The secondary phone can only receive calls.

- ▶ To set the first and secondary phones, select the Phone icon > Phones >  Information.

See Infotainment System in your Owner's Manual.

## 4G LTE WI-FI® HOTSPOT ♦

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.



- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot on the infotainment system.

For more information, call 1-855-478-7767 or visit [gmc.com/support](http://gmc.com/support).

See Infotainment System in your Owner's Manual.

## WIRELESS PHONE CHARGING ♦

The Wireless Phone Charging system for smartphones is located on the center console. Visit [gmc.com/support](http://gmc.com/support) to check device compatibility. See your phone retailer for any required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the  symbol on the pad.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

## LIGHTING

### LAMP CONTROLS

Rotate the knob to activate the exterior lamps.

 Off/On

#### AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 Parking Lamps

 Headlamps

 Fog Lamps

Press to turn the fog lamps on/off.

 Instrument Panel Brightness

Press and hold the +/- buttons to adjust the instrument panel lighting.

 Task Lighting<sup>◆</sup>




Press repeatedly to cycle through the forward-facing outside mirror lamp options: both lamps on, left lamp on, right lamp on, both lamps off.



 Cargo Lamp<sup>◆</sup>

With the vehicle in Park, Reverse, or Neutral, press to cycle through the cargo bed/hitch lamps and/or rear-facing mirror lamps<sup>◆</sup>. The button indicator illuminates when the cargo bed lamps are on.



### INTELLIBEAM SYSTEM<sup>◆</sup>

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night when the lamp control is in the AUTO or  position and the system is activated, indicated by a green  on the instrument cluster. A blue  appears when the high-beam headlamps are on.





- ▶ To turn the IntelliBeam system on or off, press the  button on the end of the turn signal lever with the lamp control in the AUTO or  position.

**Note:** The fog lamps must be off to activate the IntelliBeam system. IntelliBeam activates the high-beam headlamps only when driving over 25 mph.

See Lighting in your Owner's Manual.

## ADAPTIVE CRUISE CONTROL<sup>◆</sup>

The system enhances regular Cruise Control to maintain a driver-selected following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- ▶ Use the steering wheel controls to set and adjust Cruise Control or Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near.



See Driving and Operating in your Owner's Manual.

Some equipment shown may not be included in your vehicle.


## TRACTION SELECT SYSTEM<sup>◆</sup>/FOUR-WHEEL DRIVE<sup>◆</sup>

### TRACTION SELECT MODES


The Traction Select (Driver Mode) settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Driver Information Center.


- ▶ Rotate the control knob (A) to the right to select a mode. Modes may include:



**Normal** – Use for normal driving.

 
 **Sport** – Use for enhanced responsiveness on paved roads.

 **Snow (2WD only)** – Use for enhanced traction during slippery conditions.

 **Off-Road (4WD only)** – Use for enhanced control on unpaved roads or trails at moderate speeds.

 **Tow/Haul** – Rotate the knob to the left; use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills, or busy parking lots.

 **Terrain (4WD only)** – Press the  button for enhanced control in low-speed off-road conditions. The system automatically provides light vehicle braking to simulate engine vehicle braking. Only available with the single-speed transfer case when in **4↑**.

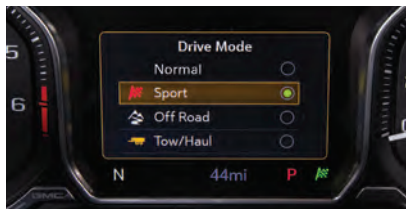

4WD Model shown

### FOUR-WHEEL DRIVE

- ▶ Use the four-wheel drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive.

The Driver Information Center displays the current status of the transfer case.

#### AUTO Automatic Four-Wheel Drive High

– Use when traction conditions vary for automatic shifting between 2WD and 4WD. Shift into this mode at any speed except when shifting from **4↓**.

**2↑ Two-Wheel Drive High** – Use for most streets and highways. Shift into this mode at any speed except when shifting from **4↓**.

**4↑ Four-Wheel Drive High** – Use when extra traction is needed or in most off-road driving. Shift into this mode at any speed except when shifting from **4↓**.

**4↓ Four-Wheel Drive Low<sup>◆</sup>** – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral.

**N Neutral** – Use to dolly or dinghy tow the vehicle behind an RV. Neutral is not available with the single speed transfer case. Refer to your Owner's Manual for the shift procedure.




See Driving and Operating in your Owner's Manual.


## DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

 
**SAFETY ALERT SEAT** – The driver's seat pulses — left side, right side or simultaneously — to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

**FORWARD COLLISION ALERT** – The  Vehicle Ahead Indicator is green when a vehicle that you're following is detected and is amber when you're following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).


- ▶ Press the  Forward Collision Alert button on the steering wheel to set the alert timing to Far, Medium, or Near.

**FOLLOWING DISTANCE INDICATOR** – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

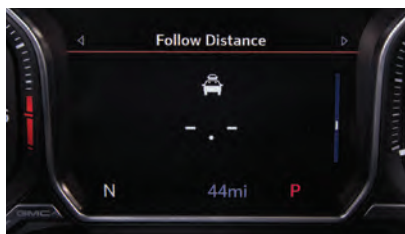


**AUTOMATIC EMERGENCY BRAKING** – At speeds below 50 mph, the system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

- ▶ To set Automatic Emergency Braking and Forward Collision Alert to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Forward Collision System

**FRONT PEDESTRIAN BRAKING** – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an  amber indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

- ▶ To set to Alert and Brake, Alert, or Off, go to Settings > Vehicle > Collision/Detection Systems > Front Pedestrian Detection.




**LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT** – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

See Driving and Operating in your Owner's Manual.




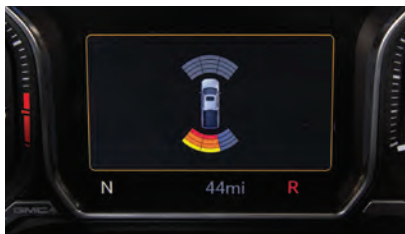 
## DRIVER ASSISTANCE SYSTEMS<sup>◆</sup>

**LANE KEEP ASSIST WITH LANE DEPARTURE WARNING** – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

▶ To turn on or off, press the  Lane Keep Assist button on the instrument panel.

**FRONT AND REAR PARK ASSIST** – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or a continuous beep sounds (if selected).

▶ To turn on or off, press the  Park Assist button on the instrument panel.



**REAR CROSS TRAFFIC ALERT** – When the vehicle is in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red triangle with directional arrow alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected).

▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Rear Cross Traffic Alert.

See Driving and Operating in your Owner's Manual.

## REAR CAMERA MIRROR<sup>◆</sup>

The rear camera mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

### A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

### B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

### C. Adjustment Controls

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

## CAMERA SYSTEM FEATURES

The available camera systems feature up to 8 cameras<sup>†</sup> with up to 15 views<sup>†</sup> to help make it easier to hitch a trailer and provide better visibility while towing.




### REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen. Camera view buttons<sup>†</sup> are on the screen.

- ▶ Touch the  **Guidance Lines**/ **Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Hitch View** button for a zoomed-in view of the hitch area.

### SURROUND VISION<sup>†</sup>

The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. Camera view buttons<sup>†</sup> are on the screen.

- ▶ Touch the  **Guidance Lines**/ **Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Bed View** button to check cargo. Zoom functionality also available.
- ▶ To check the available camera views when in Drive above 8 mph, touch the Camera icon on the infotainment screen and select the desired view. Touch X to exit the view.





Surround View screen



Bed View screen

### ADDITIONAL TRAILER CAMERA VIEWS<sup>†</sup>

Multiple views to aid in trailering are shown on the infotainment screen using the vehicle cameras and up to two additional wired GMC accessory cameras<sup>†</sup> mounted on the rear or interior of the trailer.

- ▶ Touch the  **Rear Side View** button for a biased split view of each side of the trailer (more of the left or right side will be shown based on trailer position).
- ▶ Touch the  **Transparent Trailer View** button for a view behind the trailer. Compatible with most conventional box trailers<sup>\*</sup>; requires accessory camera<sup>†</sup>.



Transparent Trailer View screen


**Jack-Knife Alert<sup>†\*</sup>** – The Jack-Knife Alert displays a warning symbol when the truck/trailer angle is in a possible jack-knife position and there is a potentially imminent collision situation. The Safety Alert Seat<sup>†</sup> may pulse or beeps may sound (if selected).

**Note:** Accessory camera system compatible with most trailer and hitch types.

See Driving and Operating in your Owner's Manual.


## POWER MIRRORS♦/TRAILERING MIRRORS♦

### POWER MIRROR ADJUSTMENT

- ▶ Press the  **Mirror Selector** button to select the driver or passenger side mirror; use the four-way control pad to adjust the mirror.



### POWER FOLDING MIRROR

- ▶ Press the  **Folding Mirror** button to fold or unfold the mirrors.

### TRAILERING MIRRORS

The mirrors can be extended for better visibility when towing a trailer. The lower wide-field view mirror adjusts manually.

- ▶ To extend the manual mirror, grasp the mirror housing and pull back and rearward in one motion. The housing extends on a curved arc. Push in the housing to return the mirror to its original position.






**Note:** Reset the power mirrors if they are adjusted manually by using the power controls to fold/unfold the mirrors to their normal position.

See Keys, Doors and Windows in your Owner's Manual.


## HILL DESCENT CONTROL♦

The system maintains vehicle speed from 1–14 mph while descending a steep incline in a forward or reverse gear. Vehicle speed must be below 31 mph to enable the system.

1. Press the  **Hill Descent Control** button on the center of the instrument panel. The current speed will be the set speed. The  symbol will illuminate on the instrument cluster.
2. Adjust speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes.

See Driving and Operating in your Owner's Manual.

## TRUCK TIRE PRESSURE MONITORING SYSTEM

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

With the ignition On or in Accessory mode, the Tire Fill Alert provides visual and audible alerts to help with inflating a tire to the recommended tire pressure (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from a flashing light to a solid light.

**Note:** Refer to your Owner's Manual for accessory trailer tire pressure monitoring system information.

See Vehicle Care in your Owner's Manual.

## GMC MULTIPRO TAILGATE OPERATION

The tailgate has 6 functional positions to improve loading, unloading and access to the cargo box. To operate the tailgate, it must be unlocked or the key fob must be within 3 feet of the tailgate.

### 1. Primary Gate

Open the primary gate for access to the cargo box.

### 2. Primary Gate Load Stop

With the primary gate open, the load stop helps keep longer items secure in the cargo box.

### 3. Easy Access

The inner gate folds down for easier reach into the cargo box to access items near the cab.

### 4. Full-width Step

With the primary gate open, the inner gate folds into a sturdy step (up to 375 lbs.) with a convenient handle for easy cargo box entry and exit.

### 5. Inner Gate Load Stop

With the primary gate closed, fold the inner gate for two-tier storage and open the load stop to help keep longer items secure.

### 6. Inner Gate Work Surface

With the primary gate closed, fold the inner gate for two-tier storage or for use as a standing-height work surface.

## OPEN THE INNER GATE

 
► Press the upper button (A) on the tailgate.

**Note:** Do not lower the inner gate with the primary gate open if a hitch ball or trailer is attached.

## ENABLE/DISABLE THE INNER GATE

The inner gate can be disabled to prevent it from being opened when a hitch or other equipment is installed.

► To disable or enable inner gate operation, press and hold the upper button (A) for 3 seconds until the taillamps flash.

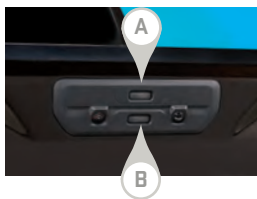

## OPEN THE PRIMARY GATE

► Press the lower button (B) on the tailgate.

► Press the  Power Tailgate button twice on the key fob.



See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

## GMC MULTIPRO TAILGATE OPERATION

### OPEN THE PRIMARY GATE AND INNER GATE

- ▶ Press the lower button and then upper button (B then A) on the tailgate consecutively.

### OPEN THE LOAD STOP OR STEP

- ▶ Press the release bar (C).

See Keys, Doors and Windows in your Owner's Manual.



## TRAILERING

### PROGRADE TRAILERING SYSTEM

The in-vehicle trailering app on the infotainment screen allows customized trailer profiles with a variety of helpful towing assistance features, including a hitching and setup checklist, trailer tire pressure and temperature monitoring, trailer light testing, Jack-Knife Alert\*, Trailer Length Indicator\*, trailer theft detection and more. Trailering App information also is available with the myGMC mobile app.



**Note:** The Trailering App will monitor trailer presence, even while the vehicle is off, by periodically checking the trailer lighting circuits. On trailers equipped with LED lights, these periodic checks may cause the trailer lights to flash. This flashing will become more frequent if Theft Alert is enabled.

### HITCH AREA LIGHTING

- ▶ Press the  **Cargo Lamp** button on the left side of the instrument panel to turn the cargo bed lamp or conventional hitch lamp on/off.

### TRAILERING INFORMATION LABEL

The Trailering Information Label, located on the pillar between the driver and rear-passenger doors, provides vehicle-specific weight and capabilities ratings.

### INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the power output, or Trailer Gain, to the trailer brakes. The control panel is on the center of the instrument panel. ITBC information is displayed on the ITBC page on the Driver Information Center.

- ▶ Squeeze the control together (right side does not move) to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons.



See Driving and Operating in your Owner's Manual.

## ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The GMC Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

### ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit [onstar.com](http://onstar.com), call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

## MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit [onstar.com](http://onstar.com) for more details. Download the mobile app from the App Store or Google Play Store.

## GMC OWNER CENTER

Get to know your vehicle inside and out with the GMC Owner Center. Check out personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service required) and more. Create an account today at [gmc.com/owners](http://gmc.com/owners).

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2022 General Motors LLC. All Rights Reserved.



85116176

We recommend always using  
ACDelco or GM Genuine Parts.



85116176 B